

TECH DATA

Technical Information Sheet

FEATURES & BENEFITS

- EXCLUSIVE™ Hot Melt Technology
- Knitted Scrim with MasterWeave™ Technology – Premier's proprietary blend of natural fibers
- Extra Wide – Six Inch Tapes
- A Full 6" of Hot Melt
- Environmentally Safe
- Low VOC's
- Low Odor or Smoke
- Silicone Treated Paper




PREMIER SPOTLIGHT:

THE SIDEKICK

Premier's *The Sidekick™* offers a new handy stackable dispensing package for Premier 340 and 460 tapes that keeps the tape rolls stored neat and clean. It holds two jumbo rolls of tape. The Sidekick not only looks professional, but it also saves you time and money. The Sidekick features a divider inside that protects the rolls and helps make dispensing easier. The handy tray at the bottom of the box allows the seam tape to pull through along the seam path directly from the dispenser. This saves time, and makes the job easier.

- Professional GREEN packaging made from recyclable paper
- Reusable box
- Neat stackable package
- Slotted sides allow you to see how much tape is remaining
- Easy carry handle
- Dispenses tape straight down the middle of the carpet seam
- Stable package design doesn't slide around during tape dispensing

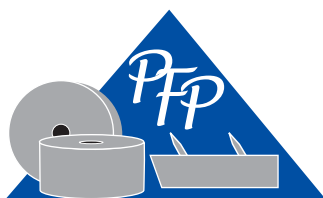

PREMIER FLOORING PRODUCTS

www.premiertapeproducts.com
premier@premierapeproducts.com

6 INCH CARPET SEAM TAPE 692 SUPREME X-WIDE

692 Supreme X-Wide

6 Inch, Knitted Scrim with Amber Beaded Hot Melt

- Gross Wt./Roll: 4.8 lbs.
- Roll Length: 66 ft. (20 meters)
- Roll Width: 7.25 inches
- Paper: Creped Kraft
- Back Treatment: Silicone Release
- Traffic Rating: Heavy Commercial - Heavy Residential
- Used to Seam: Berbers, Rough Backings, Axminster, Wilton, Wovens, ActionBac® Jute, AdBac™, and SoftBac® Carpets

Premier Glue Sticks

Professional grade hot melt sticks for carpet edge sealing applications

- Can be used for carpet edge sealing, stairways, patch repairs and all hard-to-reach seaming problems
- 8 sticks per pack / 25 packs per case
- Sticks are 1/2-in. diameter by 10-in. long



RECOMMENDATIONS FOR CARPET SEAMING:

1. To reduce smoking and odors, keep seaming iron clean. Adhesive buildup can reduce the iron temperature by 100°F.
2. Seam location is important. Run the seam towards the light source. This will minimize the possibility of shadows highlighting the seam.
3. Prior to installation test a sample piece of carpet. Be sure the backing you are trying to seam is suitable for seaming with hot melt carpet seaming tape.
4. Be sure the edges of the carpet are flat before seaming by trimming both carpet edges straight and back-roll.
5. Be sure all seams are rolled immediately.
6. Be sure the iron has a heat shield to protect against excessive heat transfer that can shrink and curl synthetic backing and yarns.
7. To eliminate possible shading along the seam, seam in the direction of the nap. Keep the iron moving at a steady rate.
8. Be sure that the hot melt is fully activated, and that you get into the adhesive before it has time to cool.
9. As the iron is moving down the seam, guide the carpet off the rear of the iron and press it firmly into the hot adhesive and immediately roll the seam.
10. Use a pull behind weight as you seam, to make sure the carpet backing does not pull loose from the tape before the hot melt has time to set properly.
11. Prior to stretching with a power stretcher, allow enough cooling time, approximately five to eight minutes.

revised 09-20-2008



1201 E. Lexington Ave • Pomona, CA 91766 • phone: 909-623-8032 • fax: 909-623-8074